


**Please read this leaflet carefully when you install KX-HTS series and KX-HDV series to the existing user network.**

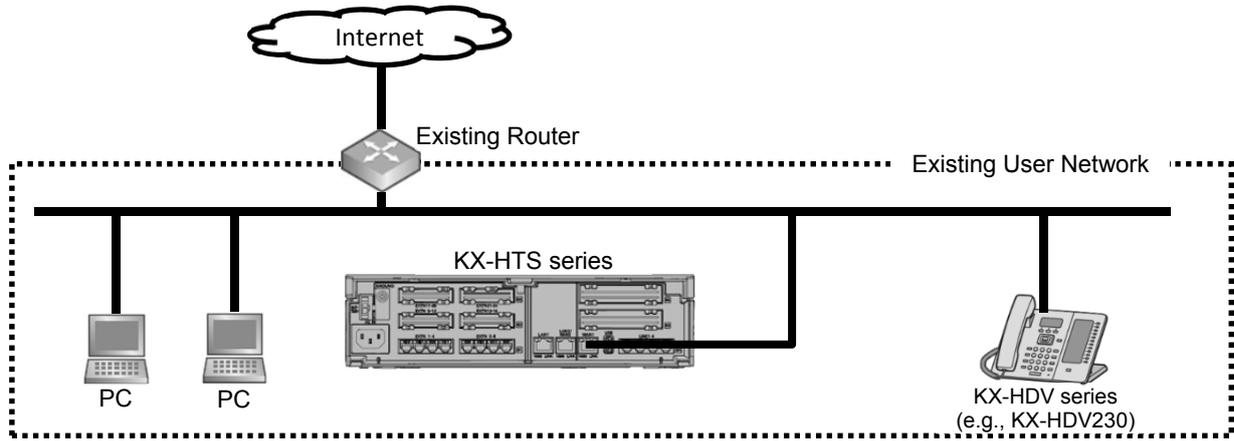


For your information, Video Instruction about the installation is uploaded on the Panasonic Web site at: <https://channel.panasonic.com/contents/19893/>



**Step 1: Program KX-HTS series**

1. Connect KX-HTS series to the existing User Network, and then connect the PC to the KX-HTS series as the figure.

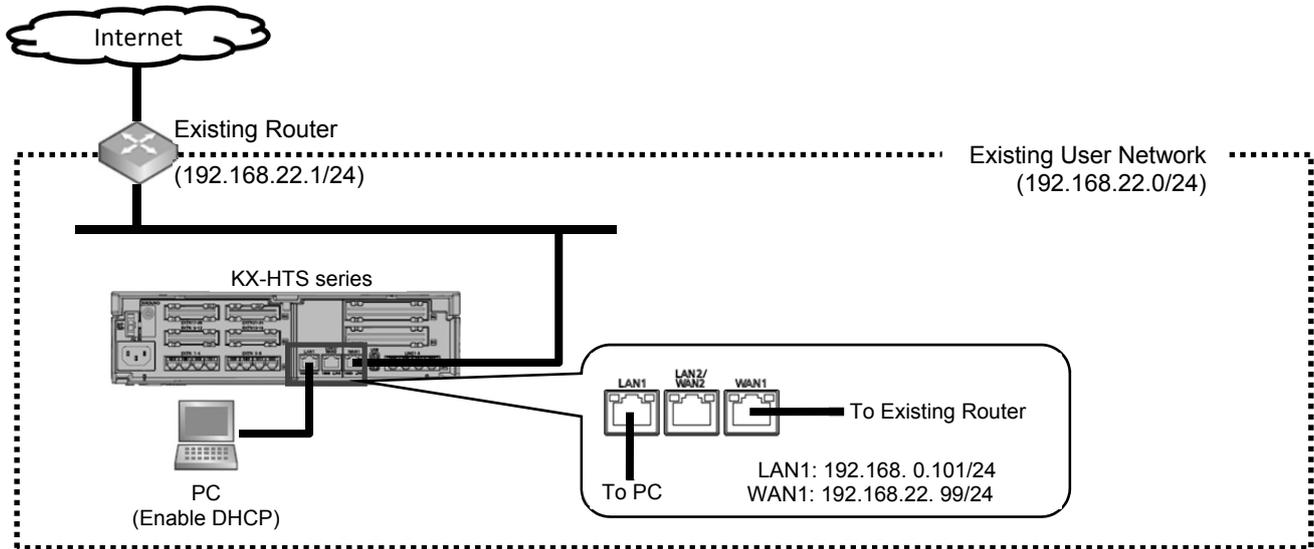

2. In Web Maintenance Console, configure the following settings for KX-HTS series

- a. Set the IP address, Subnet Mask, and Default Gateway for the WAN1 port

**Note**

Configure the settings according to the IP address system of the existing user network. Also, set the IP address which does not duplicate other IP device.

Network Configuration > 3.WAN > 1.WAN Setting

**WAN**

HTS can be connected to your service provider in any of the following ways

WAN TYPE	Fix IP
WAN connection Name	WAN1_Fix_IP
IP address,by your ISP	192 . 168 . 22 . 99
Subnet Mask	255 . 255 . 255 . 0
ISP Gateway Address	192 . 168 . 22 . 1

- b. Disable the Firewall setting

Network Configuration > 7.Firewall > 1.Firewall

**Firewall Setting**

HTS provides extensive firewall protection against a wide array of common hacker attacks. This is done by restricting connection parameters to limit the risk of intrusion.

Enable  Disable

- c. Set the network address of the existing user network to enable communication with KX-HDV series connected in the existing user network

PBX Configuration > 2.Extension > 7.SIP Extension Property

**SIP Extension Property**


PBX Configuration > 2.Extension > 7.SIP Extension Property

Domain for SIP Extension

<b>IP Address of SIP Extension in existing router</b>				
IP Address	192	. 168	. 22	. 0
Subnet Mask	255	. 255	. 255	. 0

## Step 2: Connect KX-HDV series to KX-HTS series

1. Connect the "LAN" port of KX-HDV series to the "LAN" port of KX-HTS series.

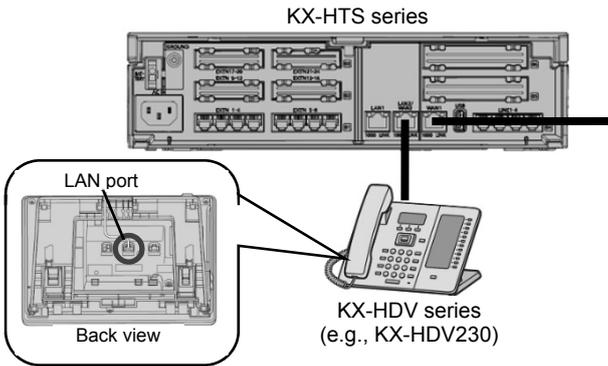

2. KX-HDV series will be registered to KX-HTS series automatically. Confirm that an extension number (e.g., 101) is displayed on the LCD of KX-HDV series.

e.g., K-HDV230:




### Note

If the extension number is not displayed on the LCD of KX-HDV series for more than 10 minutes after connecting the KX-HDV series to the KX-HTS series, initialize the KX-HDV series. Refer to the Web site at: <http://www.panasonic.net/pcc/support/pbx/manual/kx-hts/index.html>


## Step 3: Change the Network settings of KX-HDV series

For connecting the KX-HDV series (e.g., KX-HDV230) to the existing user network, configure the following settings:


1. Press **Menu**
2. [**▲**]/[**▼**]: "System Settings" → **OK**
3. [**▲**]/[**▼**]: "Network Settings" → **OK**
4. [**▲**]/[**▼**]: "IPV4 Settings" → **OK**

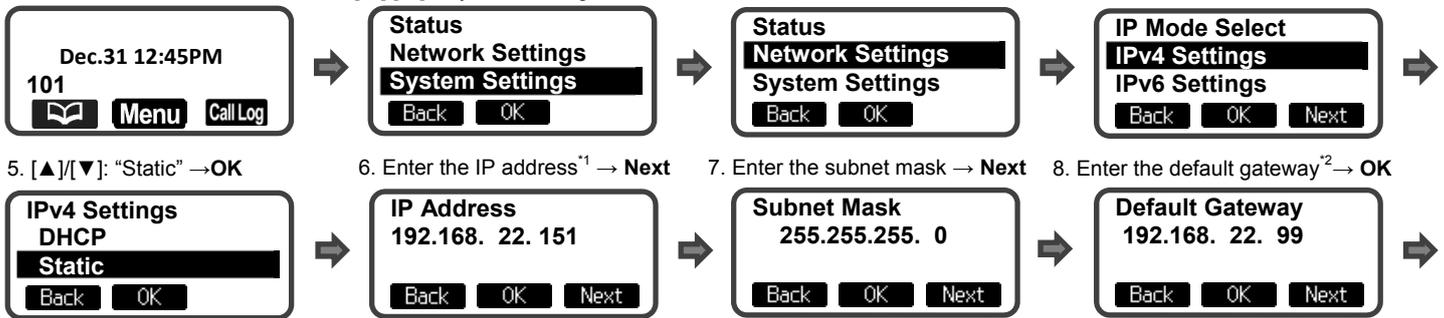

5. [**▲**]/[**▼**]: "Static" → **OK**

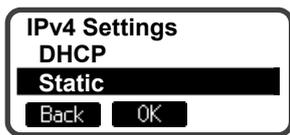


6. Enter the IP address<sup>\*1</sup> → **Next**

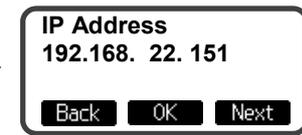

7. Enter the subnet mask → **Next**



8. Enter the default gateway<sup>\*2</sup> → **OK**

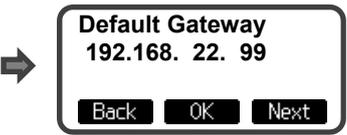

"Not Registered" will be displayed.



\*1 Enter the IP address according to the IP address system of the existing user network. Also, please set the IP address which does not duplicate other IP device.


\*2 For the default gateway setting, enter the IP address of the WAN1 port of KX-HTS series which is the same value as "IP Address, by your ISP" shown as below. DO NOT set the IP address of the existing router.

Network Configuration > 3.WAN > 1.WAN Setting

IP address,by your ISP	192	. 168	. 22	. 99
Subnet Mask	255	. 255	. 255	. 0
ISP Gateway Address	192	. 168	. 22	. 1

## Step 4: Connect KX-HDV series to the existing user network

1. Disconnect the KX-HDV series from the LAN port of KX-HTS series, and connect to the existing router.

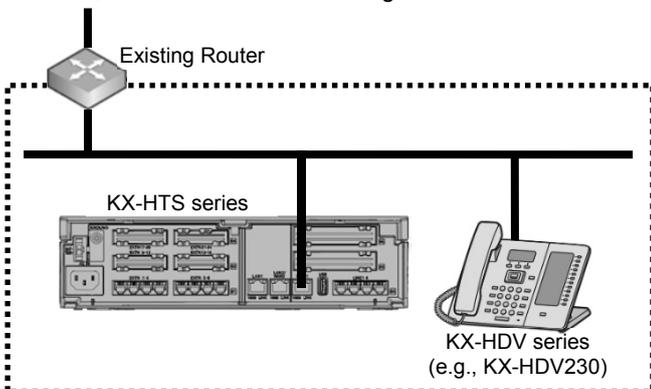

2. KX-HDV series will be registered to KX-HTS series automatically. An extension number is displayed on the LCD of KX-HDV series.

e.g., K-HDV230:



Repeat Steps 2 to 4 for the number of KX-HDV series to be registered.