

CNF24

User Guide



COPYRIGHT

This manual is proprietary to SAMSUNG Electronics Co., Ltd. and is protected by copyright. No information contained herein may be copied, translated, transcribed or duplicated for any commercial purposes or disclosed to third parties in any form without the prior written consent of SAMSUNG Electronics Co., Ltd.

TRADEMARKS

All other company and product names may be trademarks of the respective companies with which they are associated.

This manual should be read before the installation and operation, and the operator should correctly install and operate the product by using this manual.

This manual may be changed for the system improvement, standardization and other technical reasons without prior notice.

For further information on the updated manual or have a question for the content of manual, contact the address or homepage below.

**Address: Document Center 3rd Floor Jeong-bo-tong-sin-dong, Dong-Suwon P.O. Box 105, 416,
Maetan-3dong Yeongtong-gu, Suwon-si, Gyeonggi-do, Korea 442-600**

Homepage: <http://www.samsungdocs.com>



INTRODUCTION

Purpose

This guide describes CNF24 basic information and features.

Document Content and Organization

This manual consists of 4 chapters and an abbreviation.

CHAPTER 1. CNF24 Overview

Describes CNF24 overview and capacity.

CHAPTER 2. CNF24 Setup

Describes the CNF24 setup procedure and license.

CHAPTER 3. Conference Manager

Describes the Conference Manager functions.

CHAPTER 4. CNF24 Features

Describes conference features of the CNF24.

ABBREVIATION

Provides the definitions of the abbreviations used in this manual.

Conventions

The following types of paragraphs contain special information that must be carefully read and thoroughly understood. Such information may or may not be enclosed in a rectangular box, separating it from the main text, but is always preceded by an icon and/or a bold title.



WARNING

Provides information or instructions that the reader should follow in order to avoid personal injury or fatality.



CAUTION

Provides information or instructions that the reader should follow in order to avoid a service failure or damage to the system.



CHECKPOINT

Provides the operator with checkpoints for stable system operation.



NOTE

Indicates additional information as a reference.

Console Screen Output

- The lined box with 'Courier New' font will be used to distinguish between the main content and console output screen text.
- 'Bold Courier New' font will indicate the value entered by the operator on the console screen.

Reference Manuals

OfficeServ DM User Guide

Describes how to connect and use the OfficeServ DM, how to configure and set the OfficeServ key phone system's environment.

Revision History

EDITION	DATE OF ISSUE	REMARKS
00	09. 2010.	First edition
01	11.2010	Second edition



This page is intentionally left blank.



TABLE OF CONTENTS

INTRODUCTION	3
Purpose.....	3
Document Content and Organization	3
Conventions	4
Console Screen Output.....	4
Reference Manuals.....	4
Revision History.....	5
CHAPTER 1. CNF24 Overview	12
Overview	12
CNF24 Capacity	15
System Capacity.....	15
Slot Information for CNF24.....	16
CHAPTER 2. CNF24 Setup	18
CNF24 Setup	18
Setup Procedure.....	18
CNF24 License	20
Updating CNF24 Setup Information	21
CNF24 Status	22
CHAPTER 3. Conference Webpage Manager	24
Environment	24
Operation	25
Starting the OfficeServ Conference Webpage Manager	25
Log In.....	27
Meet Me Main	28

Screen Layout	28
Create	29
Detail.....	33
Scheduled Conference(s)	34
Cancel Reservation.....	35
Scheduler History	36
My Scheduler	37
Watch.....	38
Active Conference Status	39

CHAPTER 4. Conference Features

40

Meet-Me Conference	42
Features	42
Conference Progress	46
Ad-hoc Conference	59
Features	59
Conference Progress	60
Pre-defined Conference	61
Features	61
Conference Progress	62

ABBREVIATION

63

B	63
C	63
D	63
F	63
H	63
I	63
J	63
L	64
M	64
O	64
P	64
R	64
S	64
U	64
W	64

LIST OF FIGURES

Figure 1.1	Front View of the CNF24.....	13
Figure 1.2	Slot Information for CNF24.....	16
Figure 2.1	CNF24 Parameter Setting	19
Figure 2.2	Input Service License Key	19
Figure 2.3	CNF24 License	20
Figure 3.1	Conference Webpage Manager.....	25
Figure 3.2	Java Downlad Page.....	26
Figure 3.3	Log in screen.....	27
Figure 3.4	Screen Layout	28
Figure 3.5	Conference Time Selection	29
Figure 3.6	Conference Reservation.....	30
Figure 3.7	Select Conference Member	31
Figure 3.8	Meet Me Conference Invitation.....	32
Figure 3.9	Conference List.....	33
Figure 3.10	Reserved Meet Me.....	34
Figure 3.11	Cancel Reservation	35
Figure 3.12	Meet Me History	36
Figure 3.13	My Meet Me	37
Figure 3.14	Conference Status.....	38
Figure 3.15	Current Conference Status	39
Figure 4.1	Conference Options.....	45
Figure 4.2	Conference Webpage Manager (DM 9.2.1)	46
Figure 4.3	Conference Reservation.....	47
Figure 4.4	Select Conference Member	49
Figure 4.5	Invitation Letter.....	50
Figure 4.6	MJOIN Feature Code.....	51
Figure 4.7	Record Meet-Me Conference	53
Figure 4.8	Download Recorded Conference.....	54
Figure 4.9	Save recorded conference	55
Figure 4.10	Page Meet-Me Conference.....	56
Figure 4.11	MCONF Feature Code.....	60
Figure 4.12	MGC Feature Code.....	62

LIST OF TABLES

Table 1.1	Ports and LEDs of the CNF24	13
Table 1.2	System Capacity.....	15
Table 3.1	Installation Environment.....	24
Table 4.1	Examples of conference group configurations.....	41



CHAPTER 1. CNF24 Overview

This chapter describes CNF24 overview and capacity.

Overview

CNF24 provides transceiver function of packet data converted from voice data through the packet network. The extension participant who is connected in the system and the external participant who is connected in the PSTN or SPnet can participate to the voice conference.

CNF24 provides maximally 24 lines for voice conference, and the group participant in the conference can be varied from 2 lines to 24 lines flexibly. The maximum recording capacity per CNF24 is 50 hours, and concurrent recording channel is restricted to 6 channels.

Major Functions

Functions of CNF24 are as follows.

- Supports Meet-Me conference which the participant makes a phone call to the system to attend the conference
- Supports Pre-defined conference which the chairperson makes phone calls for a specific group at once to invite members to the conference
- Supports Ad-hoc conference which the chairperson makes a phone call for each member to invite the member to the conference
- Permits a participant to enter the conference after notifying members in the conference
- Provides the chairperson with additional functions for the conference using Conference Manager function
- Register and setup function for guidance and greetings for the conference

Front View of CNF24

The front view of the CNF24 is shown in the figure below:



Figure 1.1 Front View of the CNF24

The components on the front panel of the CNF24 have the functions below.

Table 1.1 Ports and LEDs of the CNF24

Ports, LEDs	Functions
LAN	Port that connects the Ethernet. - Connector: RJ45 - Cable: CAT 5 cable, UTP
SIO	UART port (for tests).
RST	Button for resetting the CNF24.
RUN LED	This LED indicates CNF24 status. - Off: Power is not being supplied. - On: Booting. - Blink: The RAM program is operating.
SVC LED	This LED indicates if the CNF24 service is being offered. This LED turns on when the CNF24 software task can be serviced. - Red blink: CNF24 service is not available - Green blink: CNF24 service available
LAN LED	This LED indicates the status of the Ethernet link - Red: Linked as 10 BASE-T Ethernet mode - Red blink: Transmitting/receiving data as 10 BASE-T - Green: Linked as 100 BASE-TX Ethernet mode - Green blink: Transmitting/receiving data as 100 BASE-T - Orange: Linked as 1000 BASE-TX Ethernet mode - Orange blink: Transmitting/receiving data as 1000 BASE-TX - Off: Link off
MC LED	- Green blink: Auxiliary memory (NAND) is accessed. - Off: No access

(Continued)

Ports, LEDs	Functions
CONF LED	<p>This LED indicates the number of the conference channel</p> <ul style="list-style-type: none"> - Green: 1~8 channels conferencing - Orange: 9~16 channels conferencing - Red: 17~24 channels conferencing - Off: No conference
REC LED	<p>This LED indicates the number of the recording channel</p> <ul style="list-style-type: none"> - Green: 1~2 channels conferencing - Orange: 3~4 channels conferencing - Red: 5~6 channels conferencing - Off: No recording
MEM LED	<p>This LED indicates the capacity status of the recording storage.</p> <ul style="list-style-type: none"> - Green: Uses 0~49% of the recording storage - Orange: Uses 50~69% of the recording storage. - Red: Uses 70~79% of the recording storage - Red blink: Uses over 80% of the recording storage.
BACKUP LED	<p>This LED indicates the status of backup operation.</p> <ul style="list-style-type: none"> - Green blink: Makes backup of the recorded data to the web page. - Off: No operation

CNF24 Capacity

System Capacity

CNF24 can be installed on OfficeServ7400 (MP40) and OfficeServ7200 (MP20, MP20S) but can't be installed on OfficeServ7200 MCP. CNF24 has 24 conference channels and up to maximum 4 cards can be installed on OfficeServ7400. Conference group can be increased as more CNF24 cards are installed on the system. In case of recording or paging, a number of conference members are decreased because each recording or paging occupies one conference channel.

For more information refer to the following table.

Table 1.2 System Capacity

System	MAX. # of CNF24	MAX. # of Members
OfficeServ7400 (MP40)	4	24 members, 4 groups (Without recording or paging)
OfficeServ7200 (MP20)	2	24 members, 2 groups (Without recording or paging)
OfficeServ7200 (MP20S)	1	24 members, 1 group (Without recording or paging)

Slot Information for CNF24

If CNF24 is installed on the slot which supports more than 24 channels, all 24 conference channels are used. But if CNF24 is installed on the 16 channel slot, only 16 conference channels are supported. Refer to the following figure.

OfficeServ7400 (MP40)

Basic Cabinet		
LP40	24	24
MP40	24	24
24	24	24
24	24	24

Expansion Cabinet 1, 2		
LP40	24	24
24	24	24
24	24	24
24	24	24

OfficeServ7200 (MP20)

Basic Cabinet		
MP20	16	16
24	24	24

Expansion Cabinet		
LCP	16	16
24	16	16

OfficeServ7200 (MP20S)

MP20S	16	16
24	24	24

Figure 1.2 Slot Information for CNF24



This page is intentionally left blank.



CHAPTER 2. CNF24 Setup

This chapter describes the CNF24 setup procedure and license.

CNF24 Setup

Setup Procedure

CNF24 setup procedure is as below.

1. Install CNF24 on OfficeServ7400 or OfficeServ7200. Be aware that MCP does not support CNF24.



NOTE

Information for CNF24 Installation

Refer to the OfficeServ 7200/7400 Installation Manual.

2. Connect network cable with CNF24.
CNF24 itself can operate normally without being connected with network cable but conference service can't be provided in that case.
3. If CNF24 is ready to provide conference service, RUN LED will blink and user can check CNF24 S/W version and CPLD/PCB version in DM 2.2.0.

4. Input CNF24 IP Address in DM 2.2.16.

2.2.16.CNF24 Card	
Cabinet/Slot	C1-S4
IP Version	IPv4
IP Address	10.254.168.132
Gateway	10.254.168.1
Subnet Mask	255.255.255.0
IP Type	Private Only
Local RTP Port(start)	30000
Public IP Address 1	0.0.0.0
Public RTP Port 1	30000
Public IP Address 2	0.0.0.0
Public RTP Port 2	30000
Public IP Address 3	0.0.0.0
Public RTP Port 3	30000
FTP port	21

Figure 2.1 CNF24 Parameter Setting

CNF24 will restart automatically to apply new network setting.

5. Input Service License Key in DM 2.1.4 to make CNF24 channels free.

Service	License Key		NLWUHHCL-KHPW3OO-OGYLSM8-MJ6J70X5-86UAZ7RG-NN6YAYMY
	License Status		OK
	H.323	Allowed	24
	Soft Phone	Max Count	64
		Connected	0
	MOBEX Executive	Max Count	64
		Connected	0
	IP Phone	Max Count	64
		Connected	0
	WiFi Phone	Max Count	64
		Connected	0
	SPNET Feature	Allowed	Enable
	Call Manager	Allowed	64
	Conference	Max Count	24

Figure 2.2 Input Service License Key

CNF24 License

CNF24 license option is newly added at Service License in DM (Device Manager) to support middle-sized meet-me conference. So if you already have old Service License and want to use CNF24 service, you should get a new Service License including CNF24 count.

A number of CNF24 license counts can be up to 96 (24 x 4) in case of MP40, 48 (24 x 2) in case of MP20 and 24 in case of MP20S.

SW3 - SVC

LICENSE KEY	
NQUMWELH-PLJWZMLP-LUHCLIU9-H1A8FRMM-74DVPS3Y-7ZTCHYEQ	
BASIC INFORMATION	
Country	
Purpose	
Description	
User Name	
Tel	
MAC Address	
MAC Address Type	
Switch Type	
License Type	
CAPACITY	
H.323 Trunk Count	10
SoftPhone Count	10
IP Phone Count	10
Mobex Executive Count	10
WIFI Phone Count	10
Call Manager(OS COMM)	10
Conf Bridge Port Count	24
SPNet	Nonuse
Duplexing	Nonuse

Figure 2.3 CNF24 License

Updating CNF24 Setup Information

Each CNF24 has unique MAC address and system manages card information by using its MAC address. So if location of CNF24 is changed, user should update the setup information as following cases.

- When CNF24 is installed in slot A at first time.
User doesn't have to care about updating setup information.
- When CNF24 which was already installed in slot A is installed in another slot B.
CNF24 information is automatically updated in slot B. But user should delete previous CNF24 information of slot A in DM 6.3.1.
- When current CNF24 is pulled out and another CNF24 is installed in same slot.
User doesn't have to care about updating installation information. Mac address of new card is updated automatically.
- When current CNF24 installed in slot A is pulled out and another CNF24 is installed in slot B.
User should clear previous setup information of slot A to update new CNF24 information. In this case user should assign new IP address to CNF24 installed in slot B to being provided conference service. (in DM 2.2.16)

CNF24 Status

System can provide conference service when CNF24 status is active. Be sure that card status can change into idle in below cases and user should check those cases for recovery.

- LAN connection between system and CNF24
System checks card status every 5 seconds. If network cable of CNF24 is disconnected, system restricts conference service until LAN connection is recovered.
- Card Parameter setting
When IP address is not assigned to CNF24, system can't check card status. Every time new CNF24 is installed, user should assign its IP address.
- Service License Key
Even though CNF24 is installed normally, system can't provide conference service without service license. If user tries to make a conference call in that case, 'No CNF CHs are available' will be displayed on the phone. Check service license key in case of system initialization or changing country.



This page is intentionally left blank.



CHAPTER 3. Conference Manager

This chapter describes OfficeServ Conference Manager functions.

Conference Manager is a web program designed to configure and set a conference for CNF24.

Environment

OfficeServ Conference Manager can manage the conference for CNF24.

Table 3.1 Installation Environment

Category	Requirement
CPU	Pentium III or faster
Main Memory	512 MB or more
HDD Drive	At least 10 MB of free space
OS	Independent
Browser	Internet Explorer v6 or later
Java	JRE V1.6.0_03 or newer

Operation



NOTE

All the operations of the Conference Manager are restricted by the user level.

Starting the OfficeServ Conference Manager

1. Launch the web browser.
2. Input the URL like 'https://system_ip/pwp/index.html' (for MP20s) or 'http://system_ip/pwp/index.html' (for MP40, MP20).

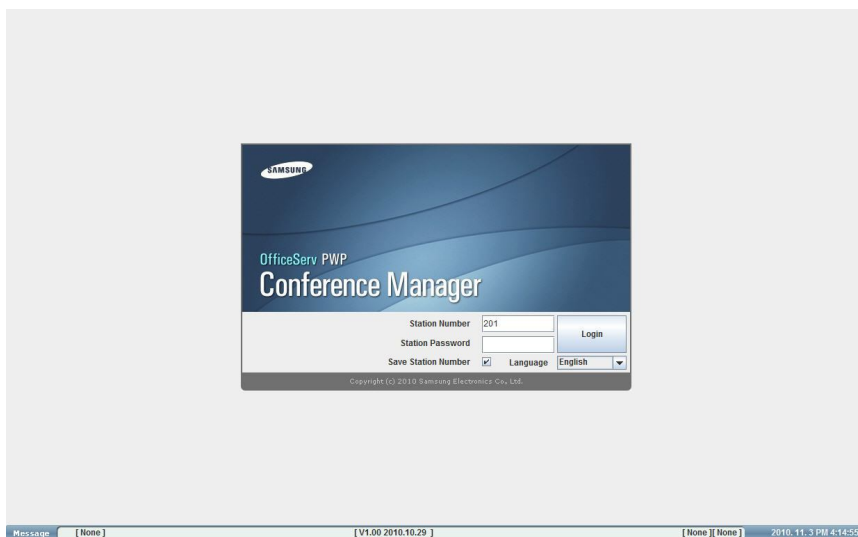


Figure 3.1 Conference Manager

**NOTE**

Java Runtime Environment

If the Java Runtime Environment is not installed or lower version than V1.6.0_3 is installed on the PC, you can see the page below. Then, click the **[Java Download Page]** or **[Java Upgrade Page]**.

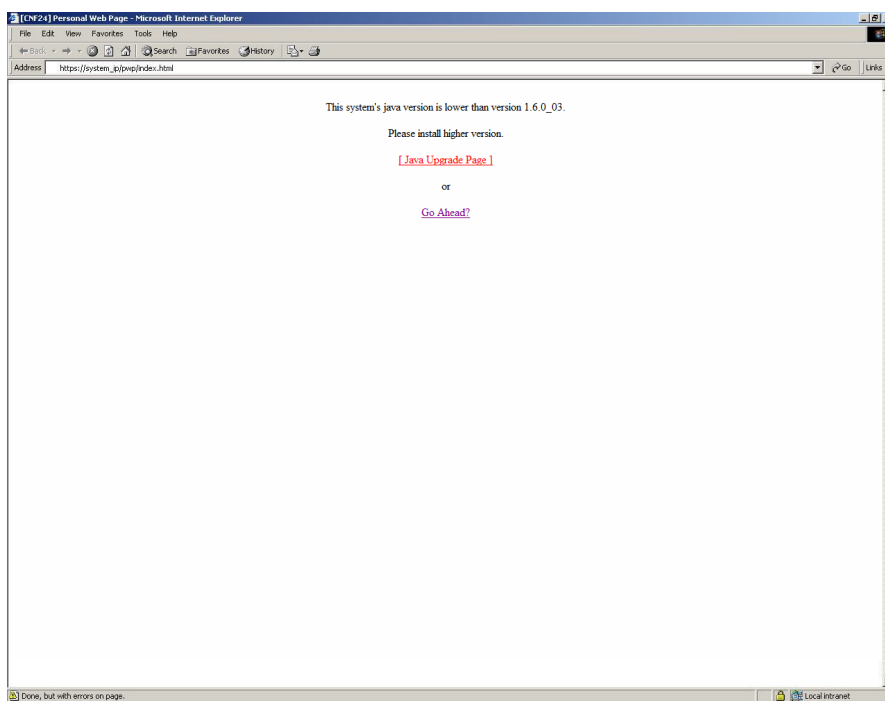


Figure 3.2 Java Downlad Page

Log In

1. Input the station number in **[Station Number]**.
2. Input the station passcode in **[Station Password]**. (default: 1234)
3. Click the **[Login]** button.

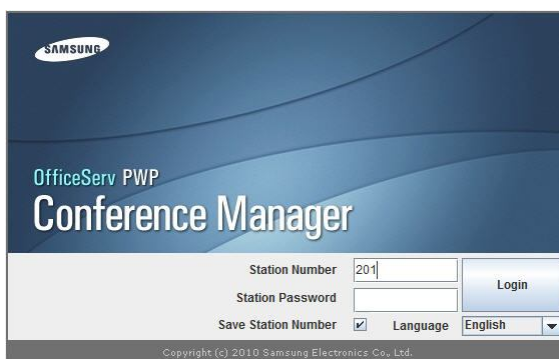


Figure 3.3 Log in screen

Meet Me Main

Screen Layout

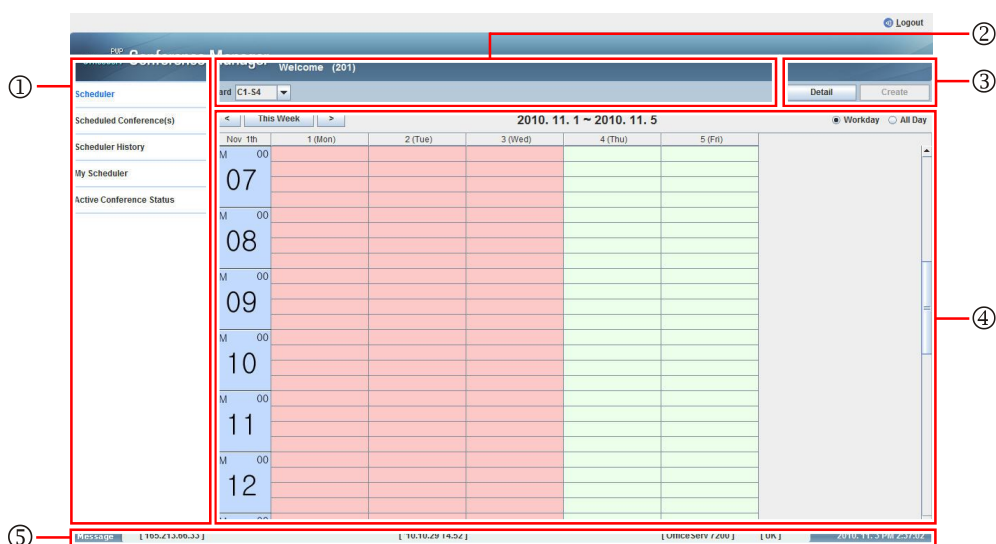


Figure 3.4 Screen Layout

Item	Description
① Menus	Display menus
② Navigator	Display the card position, and can select the previous/this/next week
③ Buttons	Function buttons
④ Time Table	Displays the time table of the channel
⑤ Status Bar	Displays information such as IP address, version, type, country, time of system

Create

1. Select the conference time by dragging the area in the time table

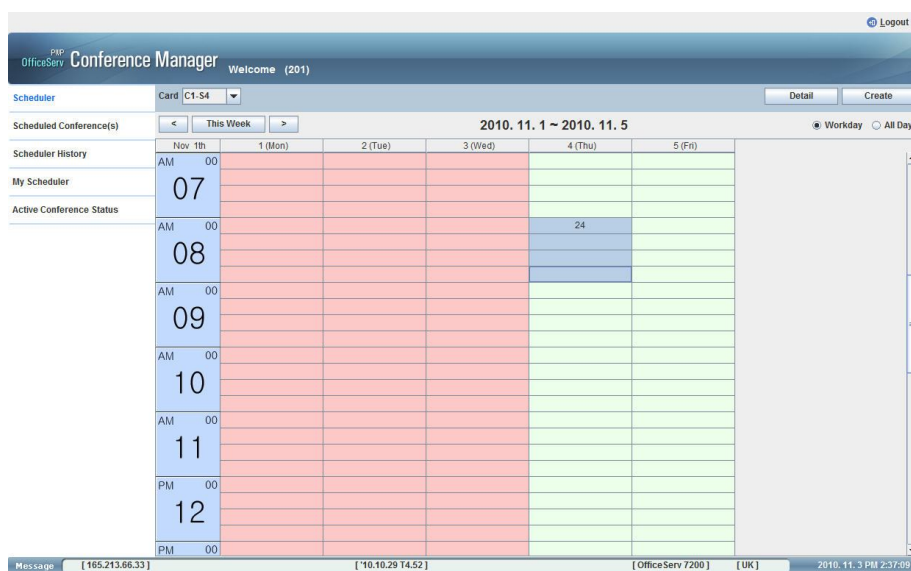


Figure 3.5 Conference Time Selection

2. Click the **[Create]** button.

3. Input the details for conference.

The screenshot shows a 'Conference Reservation Form' window. It contains the following fields and controls:

- Card:** C1-S4
- Date:** 2010. 11. 4 ~ 2010. 11. 4
- Subject:** [Empty text box]
- Conference ID:** [Empty text box] with a **Check** button.
- Duration:** AM 08:00 ~ AM 09:00
- Repeat:** Radio buttons for Once, **Daily** (selected), and Weekly.
- # of Attendees:** [Empty text box]
- Owner:** 201
- Attendee List:** Select... button and a list box.
- Send Invitation Email:** [] checkbox.
- Password:** [Empty text box]
- Options:**
 - ☐ Early Entrance
 - ☐ Recording
 - ☐ Paging
- Greeting Prompt:** [Empty text box] with an **Upload** button.
- Buttons:** Submit and Cancel at the bottom right.

Figure 3.6 Conference Reservation

Item	Description
Subject	Input the description for conference.
Conference Id	Input Conference ID. Three digits should be inserted. (ex. 100) After input the unique numeric ID, click the [Check] button If the ID is not unique, system will offer the unique ID.
Duration	Select the time for conference.
Repeat	Select the repeat type. (Once/Daily/Weekly) If you select 'Daily', the end date can't exceed 7days from start date. If you select 'Weekly', the end date can't exceed 28 days from start date.
End Date	If you select 'Daily/Weekly', select the end date for conference.
# of Attendees	Input the wanted channel count for party.
Available Channel	Display the max channel according to condition.
Attendee List	Input conference member. You can send the invitation letter by checking the 'Send Invitation letter after confirming reservation'.

(Continued)

Item	Description
Password	Input the password for conference If you don't input password, a member doesn't have to input password during joining conference.
Options	<ul style="list-style-type: none"> - Early Entrance: Determine if early entrance is allowed - Recording: Determine if recording is allowed If recording is checked, the available channel is reduced by 1. - Paging: Determine if early paging is allowed. If paging option is checked, the available channel is reduced by 1 and <Page Group> is enabled. Input the page group index.
Greeting Prompt	You can upload personal greeting message file.

Select Conference Member and Sending Invitation Letter

If you click the [Select] button, the following window will be displayed. Search subscriber by phone number or name and add selected subscriber to Party List. In Party List, subscriber's information such as phone number, name and e-mail address can be checked.

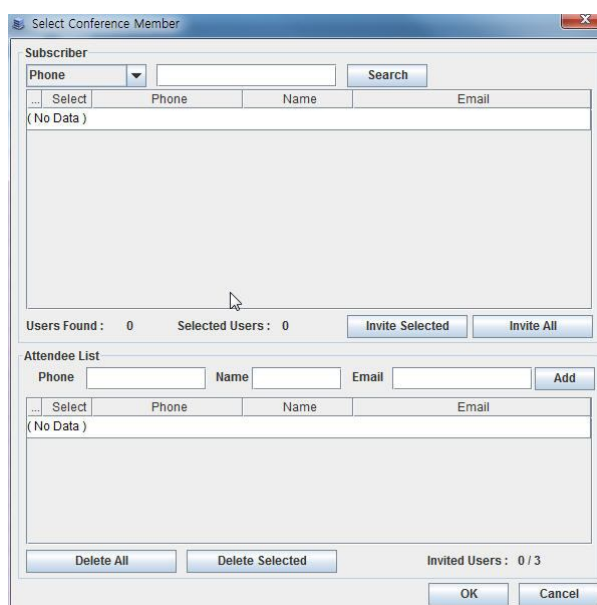


Figure 3.7 Select Conference Member

If you check the 'Send Invitation Email', you can see the window below. Make an invitation message and click the **[Send]** button. The mail will be sent to the conference members.

Meet Me Conference Invitation

Conference Subject: test800

Email Subject: test800 mail

TITLE : test800
DATE & TIME : 2010/Nov/4 (08:00 - 09:00) [DAILY until 2010/Nov/4]
PASSWORD :

CONFERENCE MEMBERS (Total Room Size:3)
CONF-ID: 800 01 MEMBER: aaa (aaa@samsung.com)
CONF-ID: 800 02 MEMBER: bbb (bbb@samsung.com)

END OF MAIL

Name	Phone	Email
bbb	203	bbb@samsung.com
aaa	202	aaa@samsung.com

Send Cancel

Figure 3.8 Meet Me Conference Invitation

Detail

If you click the **[Detail]** button, you can see the conference list.
And when you click the **[Detail]** button after selecting the time range by dragging, you can see the conference list for the time range.

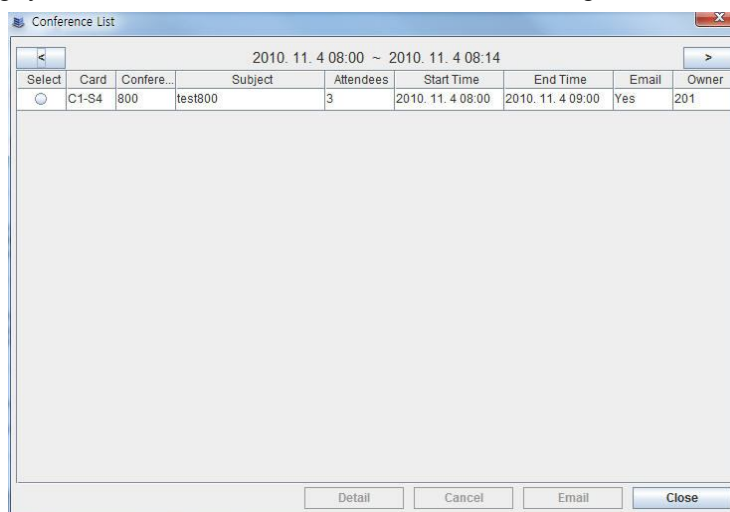


Figure 3.9 Conference List

Item	Description
Navigator (<, >)	Can select the previous/next
Detail	See the detail of selected reservation
Cancel	Cancel the selected reservation. And you can send the mail with reason
Email	See the invitation of selected conference

Scheduled Conference(s)

If you click the **[Scheduled Conference(s)]** menu, you can see the reserved conference.

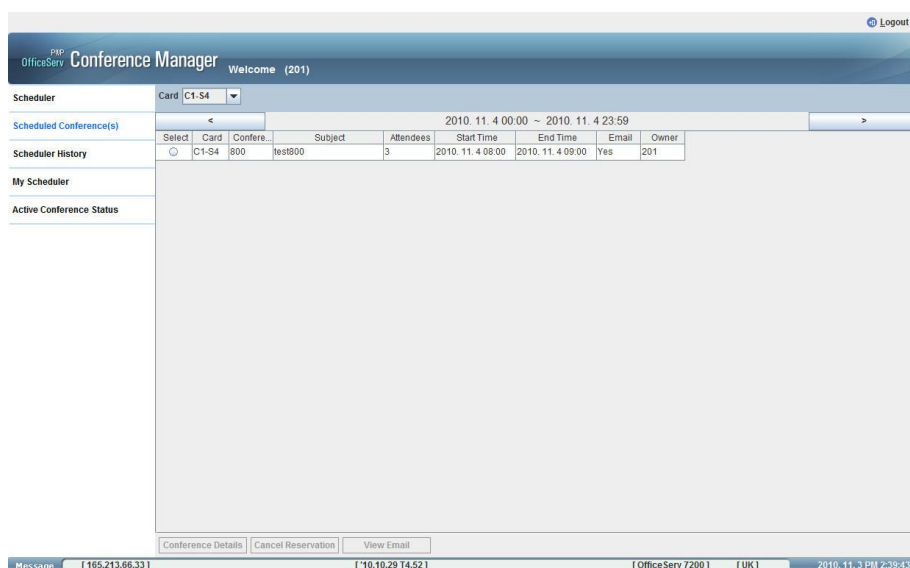


Figure 3.10 Scheduled Conference(s)


Item	Description
Navigator (<, >)	Display the card position, and can select the yesterday/tomorrow
Conference Details	See the detail of selected reservation
Cancel Reservation	Cancel the selected reservation. And you can send the mail with reason
View Email	See the invitation of selected conference

Cancel Reservation

You can cancel the reserved conference.

[Cancel Reservation] button is shown on Reserved Meet Me.

If you click **[Cancel Reservation]** button, the information of the selected conference is shown, and you can input the reason.

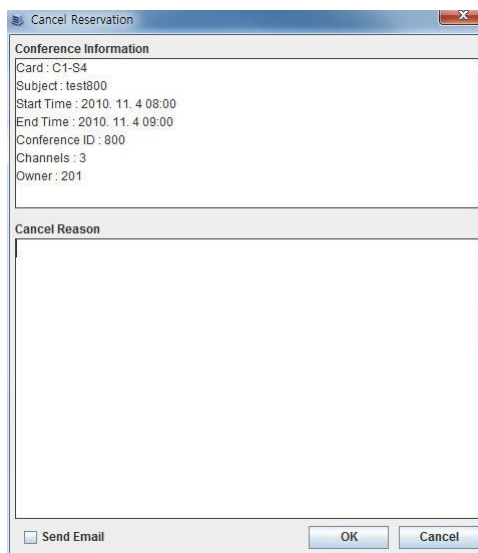

Cancel Reservation

Conference Information

Card: C1-S4
Subject: test800
Start Time: 2010. 11. 4 08:00
End Time: 2010. 11. 4 09:00
Conference ID: 800
Channels: 3
Owner: 201

Cancel Reason

☐ Send Email

OK Cancel

Figure 3.11 Cancel Reservation

Scheduler History

If you click the **[Scheduler History]** menu, you can see the conference history.

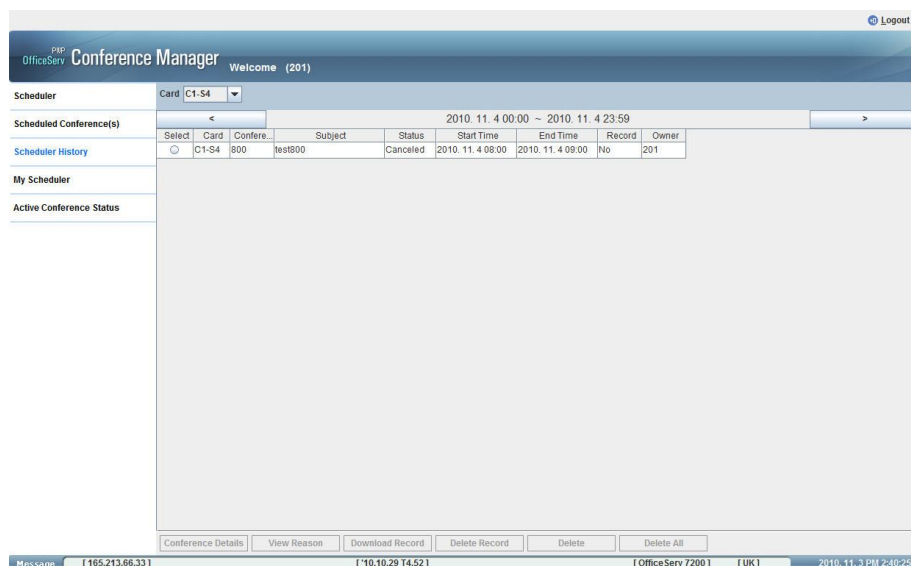


Figure 3.12 Scheduler History

Item	Description
Navigator (<, >)	Display the card position, and can select the yesterday/tomorrow
Conference Details	See the detail of selected conference
View Reason	See the cancel reason of selected conference
Download Record	Download the recording file
Delete Record	Delete the recording file
Delete	Delete the selected history
Delete All	Delete all history

My Scheduler

If click the **[My Scheduler]** menu, you can see your conference reserved list/history/in progress for login user.

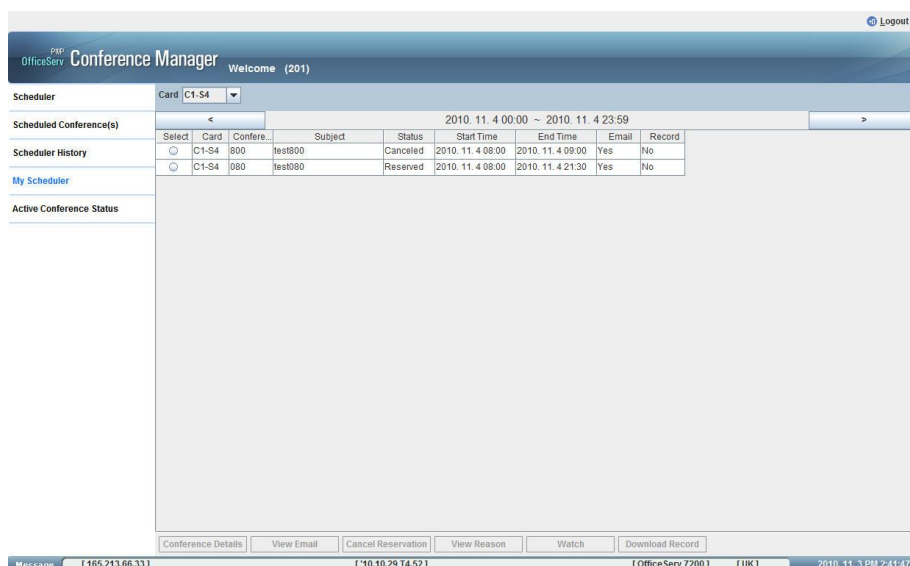


Figure 3.13 My Scheduler

Item	Description
Navigator (<, >)	Display the card position, and can select the yesterday/tomorrow
Conference Details	See the detail of selected conference
View Email	See the invitation of selected conference
Cancel Reservation	Cancel the selected conference
View Reason	See the cancel reason of selected conference
Watch	Watch the status of selected conference
Download Record	Download the recorded conference file

Watch

You can watch the status of conference and manage the conference in progress.

[Watch] button is shown on Meet Me My Page and can be activated only when the status of selected conference is In Progress.

If you click **[Watch]** button, the status of the selected conference is shown.

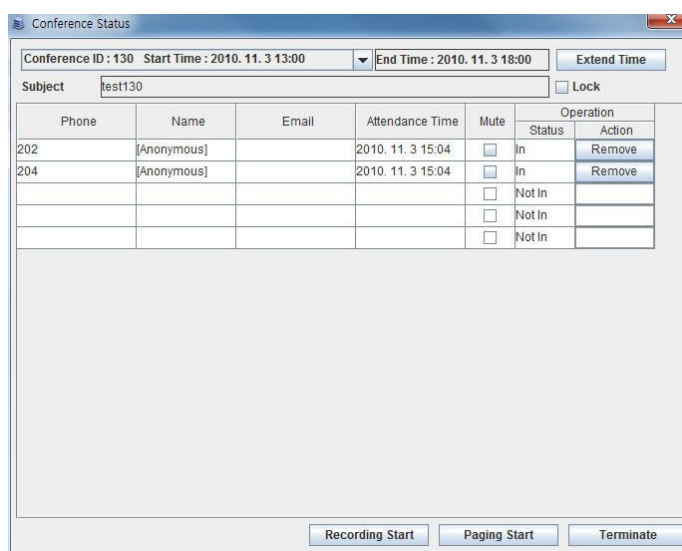


Figure 3.14 Conference Status

Item	Description
Extend Time	Extend the time of conference for 15 minutes. User can extend the time up to 00:00
Lock	Lock the conference
Action (Remove/Clear/Mute)	<ul style="list-style-type: none"> - Remove: Kick out the selected member - Clear: Clear the channel status for new member - Mute: Mute the selected member
Recording Start /Recording Stop	Record/stop the voice of conference Recording button can be activated when recording option is selected on reservation menu.
Paging Start /Paging Stop	Page/stop all members Paging button can be activated when paging option is selected on reservation menu.
Terminate	Terminate conference

Active Conference Status

If click the **[Active Conference Status]** menu, you can see your conference in progress.

The screenshot shows the 'Active Conference Status' page in the PMP OfficeServ Conference Manager. The interface includes a sidebar with navigation links: Scheduler, Scheduled Conference(s), Scheduler History, My Scheduler, and Active Conference Status. The main content area displays conference details for ID 130, with start and end times. Below this is a table of participants with columns for Phone, Name, Email, Attendance Time, Mute, and Operation (Status/Action). At the bottom, there are buttons for Recording Start, Paging Start, and Terminate. The status bar at the very bottom shows message, IP, time, and date.

Figure 3.15 Active Conference Status

Item	Description
Card	Display the card position, and can select the conference in progress
Extend Time	Extend the time of conference for 15 minutes. User can extend the time up to 00:00
Lock	Lock the conference
Action (Remove/Clear/Mute)	- Remove: Kick out the selected member - Clear: Clear the channel status for new member - Mute: Mute the selected member
Recording Start /Recording Stop	Record/stop the voice of conference Recording button can be activated when recording option is selected on reservation menu.
Paging Start /Paging Stop	Page/stop all members Paging button can be activated when paging option is selected on reservation menu.
Terminate	Terminate conference



CHAPTER 4. Conference Features

This chapter describes detail features of CNF24 conferences.

CNF24 supports 3 kinds of conference types.

- Meet-Me
- Ad-hoc
- Pre-defined.

CNF24 provides maximally 24 lines for voice conference, and the group participants in the conference can be varied from 2 lines to 24 lines flexibly. But in the case of using a recording or paging, maximum number of conference members is decreased because one channel is occupied for a recording or paging.

The maximum recording capacity per CNF24 is 50 hours, and concurrent recording channel is restricted to 6 channels.

Table 4.1 Examples of conference group configurations

Conference Group Configuration	Group Configuration
There is no recording.	Group is configured by 2 members.
	Group is configured by 3 members.
	Group is configured by 4 members.
	Group is configured by 6 members.
	Group is configured by 8 members.
	Group is configured by 12 members.
	Group is configured by 24 members.
There are more than one recording.	Group is configured by 2 members.
	Group is configured by 3 members.
	Group is configured by 4 members.
	Group is configured by 6 members.
	Group is configured by 8 members.
	Group is configured by 12 members.
	Group is configured by 23 members.
2 members and 12 groups	2 members (+1) 9 groups (Recording:6 channels, Free:0 channel)
	3 members (+1) 6 groups (Recording:6 channels, Free:0 channel)
	4 members (+1) 4 groups (Recording:4 channels, Free:4 channels)
	6 members (+1) 3 groups (Recording:3 channels, Free:3 channels)
	8 members (+1) 2 groups (Recording:2 channels, Free:6 channels)
	12 members (+1) 1 group (Recording:1 channel, Free:11 channels)
	23 members (+1) 1 group (Recording:1 channels, Free:0 channel)

Meet-Me Conference

Meet-Me conference is established when user joins the conference without being invited by the master and this conference should be reserved by the master in advance. Meet-Me conference master can check the conference information and perform additional features by Conference Manager.

Features

Meet-Me Conference Member Type

- Internal Users
All station users connected with the system can join the conference.
Refer to the below phone types that can be used as station users.
 - Analog Phone (FXS)
 - Digital Phone
 - WIP Phone
 - IP Phone
 - SIP Phone
 - Soft Phone
 - BRI S0 Phone
- External Users
External user can join the conference by using all digital trunks except Loop Start Analog Trunk (FXO). Refer to the below digital trunk types.
 - ISDN BRI Trunk
 - ISDN PRI Trunk
 - SPnet
 - SIP Trunk (To use CNF24 resource properly, MPS should be enabled.)
 - H.323 Trunk (To use CNF24 resource properly, MGI should be enabled.)

Meet-Me Conference Features

- User can join the conference without being invited by the master.
- Voice Recording and Paging
User can record current conference call. And PAGE channel can be a conference member to broadcast the current conference to PAGE group.
- Various Alarms
Conference members who already join the conference can hear Join, Leave and End alarm tone.
 - Join alarm can be heard when a new member joins the conference.
 - Leave alarm can be heard when one member leaves the conference.
 - End alarm can be heard every 30 seconds when 3 minutes left before the end of conference.
- Who am I
When a new member tries to join the conference, he/she should tell who he/she is to join the conference by following the announcement.
Member can record his/her who am I after hearing beep tone.
- Sole Participant Audio (SPA)
If a new member joins the conference at first time, he/she can hear SPA until another member joins.
- Conference Manager
The master can perform additional conference features by using Conference Manager.
 - Conference reservation
 - Conference list inspection and inquiry
 - Personal greeting
User can register personal greeting on reservation menu.
 - Conference status inquiry
 - Lock/UnLock the conference
 - Mute/UnMute the conference member
 - Kick out the conference member
 - Conference time extension

Meet-Me Conference Options

In DM 9.1.1 user can set Meet-Me conference options such as basic joining flow and mail server environment.

Basic Meet-Me joining flow can be changed by DM 9.1.1 Conference Options. If specific option is disabled, related flow will be skipped.

Below options affect joining flow.

- Password Options
- Greeting Options
- Whoami Options
- SPA Options
- Join/Leave/End Alarm Options

Only master can hear End Alarm at intervals of 30 seconds before 3 minutes.

The other options' definitions are as below.

- Early Ent Time: Set early entrance time.
Member can join the conference 15 minutes earlier than the expected start time
- Max Rec Time: Maximum recording time. (default: 300 min)
- Record Alarm Capacity: Alarm will be generated when the capacity of recording files becomes the designated capacity. (default: 70%)
- Record Delete Capacity: Recording files will be deleted when the capacity of recording files becomes the designated capacity. (default: 90%)
In this case the oldest file is deleted automatically.
- Mail Server Options: If this option is enabled, mail server will follow related options (Mail Max Retry, Mail Day Saving Time, Mail Time Zone Offset etc.)
- Mail Max Retry: Mail sending maximum retry count when sending fail.
- Mail Retry Interval: Mail sending retry interval when sending fail.
- Mail Day Saving Time: Mail Day Saving Time Disable/Enable
- Mail Time Zone Offset: Mail Time Zone Offset (-23/30 ~ +23/30)
- Mail Server IP: Mail Server's IP address
- Mail Server Port: Mail Server's connection port number
- Mail Server User ID: Mail Server's user ID
- Mail Server Password: Mail Server's password
- Mail Server Domain: Mail Server's Domain Address (instead of Mail Server IP)
- DNS IP: DNS IP address (used for Mail Server Domain)

9.1.1.Conference Options	
Item	Conference Options
Password Options	On
Greeting Options	On
Whoami Options	On
SPA Options	On
Join Alarm Options	On
Leave Alarm Options	On
End Alarm Options	On
Early Ent Time	15
Mail Server Options	On
Mail Max Retry	
Mail Retry Interval	
Mail Day Saving Time	Disable
Mail Time Zone Offset	+00 00
Max Rec Time	300
Mail Server IP	255.255.255.255
Mail Server Port	
Local Domain	
Mail Server User ID	
Mail Server Password	
Record Alarm Capacity	70
Record Delete Capacity	90

Figure 4.1 Conference Options

Conference Progress

Meet-Me Conference Reservation

1. Access Conference Manager to reserve Meet-Me conference.

You can access PWP by DM 9.2.1 or by entering below URL.

[MP20S] <https://System IP Address/pwp/index.html>

[MP20/40] <http://System IP Address/pwp/index.html>

- ID: Station Number
- Password: Password of station number (default: 1234)

Each station user can access PWP and has its own conferences. And these conferences can't be checked by another station user.

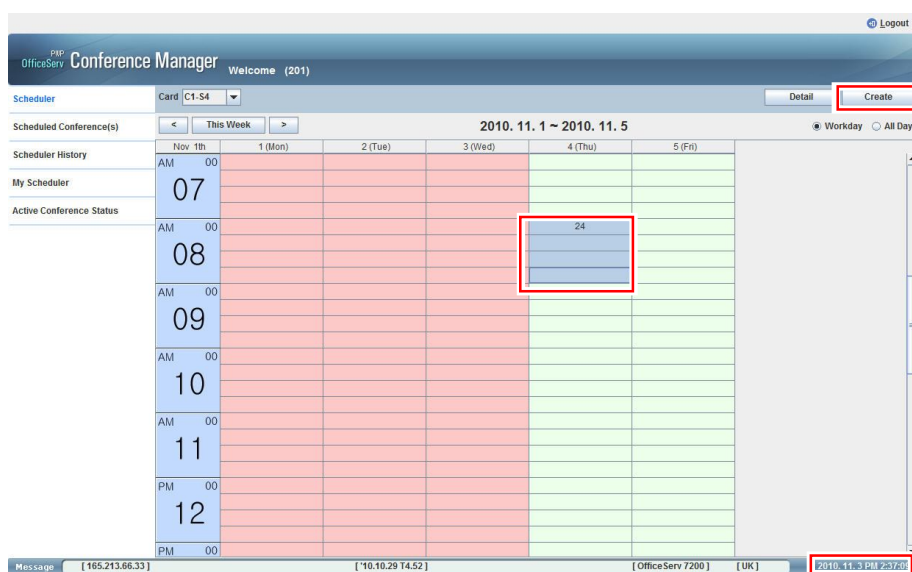


Figure 4.2 Conference Manager (DM 9.2.1)

2. Check current date and time.


3. Set conference date and time.

Select today's column. A number of free conference channels are displayed at each row.

- Column: One day (If you select Work Day, you can see Monday ~ Friday columns. If you select All Day, you can see all days including weekends.)
- Row: 15 minutes
ex.) If you want to set conference time from 10:00 to 11:00, drag the mouse pointer from 10:00 to 11:00.

4. Reserve conference.

Select **[Create]** button. Then new pop-up menu will be displayed as below.

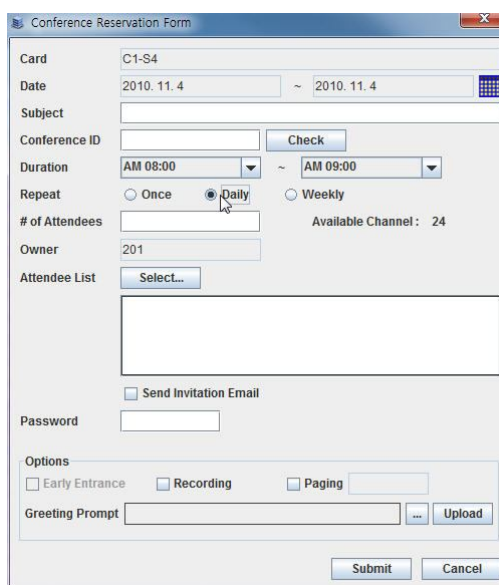

The screenshot shows a 'Conference Reservation Form' dialog box with the following fields and controls:

- Card:** C1-S4
- Date:** 2010. 11. 4 ~ 2010. 11. 4
- Subject:** (Empty text box)
- Conference ID:** (Empty text box) with a **Check** button.
- Duration:** AM 08:00 ~ AM 09:00
- Repeat:** Radio buttons for **Once**, **Daily** (selected), and **Weekly**.
- # of Attendees:** (Empty text box)
- Owner:** 201
- Attendee List:** **Select...** button and an empty list box.
- Available Channel:** 24
- Send Invitation Email:** ☐ checkbox.
- Password:** (Empty text box)
- Options:**
 - ☐ Early Entrance
 - ☐ Recording
 - ☐ Paging
- Greeting Prompt:** (Empty text box) with a **...** button and an **Upload** button.
- Buttons:** **Submit** and **Cancel** at the bottom right.

Figure 4.3 Conference Reservation

5. Input conference information

Item	Description
Subject	Input the description for conference.
Conference Id	Input Conference ID. Three digits should be inserted. (ex. 100) After input the unique numeric ID, click the [Check] button If the ID is not unique, system will offer the unique ID.
Duration	Select the time for conference.
Repeat	Select the repeat type. (Once/Daily/Weekly) If you select 'Daily', the end date can't exceed 7days from start date. If you select 'Weekly', the end date can't exceed 28 days from start date.
End Date	If you select 'Daily/Weekly', select the end date for conference.
# of Attendees	Input the wanted channel count.
Available Channel	Display the max channel according to condition.
Attendee List	Input conference member. You can send the invitation letter by checking the 'Send Invitation Email'.
Password	Input the password for conference If you don't input password, a member doesn't have to input password during joining conference.
Options	<ul style="list-style-type: none"> - Early Entrance: Determine if early entrance is allowed - Recording: Determine if recording is allowed - Paging: Determine if early paging is allowed.
Page Group	If paging option is checked, <Page Group> is enabled. Input the page group index.
Greeting Prompt	You can upload personal greeting message file.

Set e-mail server configuration

- 1) Set e-mail address of master in DM 9.1.6. Email Address. E-mail address of master is used as Sender.
- 2) When you reserve conference, select <Party List> of Conference Reservation. Then <Select Conference Member> will be shown.
- 3) There are two ways for selecting member.
 - (a) <Subscriber>: You can input party by searching pre-defined meet-me member list which was set in DM 9.1.5.
In DM 9.1.5 input meet-me member information such as name, tel and e-mail.
(ex) BOB / 216 / bob@ipums2008.samsung.com
 - (b) <Party List> : You can input party information in person.
- 4) After selecting members, set <Send Invitation letter after confirming reservation> box of Conference Reservation.
- 5) After completing conference reservation, <Meet Me Conference Invitation> will be shown.
Input <Mail Subject> and check e-mail description. Then select <Send>.

Select Conference Member and Sending Invitation Letter

If you click the Party List panel, the following window will be displayed. Search subscriber by phone number or name and add selected subscriber to Party List. In Party List, subscriber's information such as phone number, name and e-mail address can be checked.

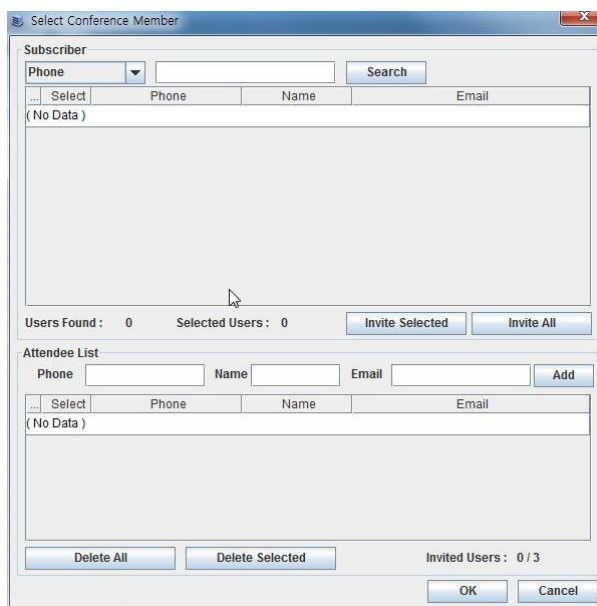


Figure 4.4 Select Conference Member

If you check the 'Send Invitation letter after confirming reservation', you can see the below window.

Make an invitation message and click the **[Send]** button. The mail will be sent to the conference members.

Name	Phone	Email
bbb	203	bbb@samsung.com
aaa	202	aaa@samsung.com

Figure 4.5 Meet Me Invitation Letter

Upload Personal Greeting prompt

If you want to use personal greeting prompt, you should change its file type as SND. Refer to the below transferring procedure.

- 1) Run multimedia program.
- 2) Open wav file that you want to upload as personal greeting.
- 3) Select <Save as> and choose <Raw (*.snd)>.
- 4) Select <Attributes> and set Encoding as u-Law and sampling rate as 8000. (You don't have to change other parameters.)
- 5) SND file is created.

After creating SND file, select the file and click <Upload> in <Greeting Prompt> menu. Refer to Figure 4.3 Conference Reservation.

Join Meet-Me Conference

1. Dial Meet-Me Feature key or code

Settings for internal and external user are different as below.

- Internal user

There are two ways to start Meet-Me join flow.

→ Assign <MJOIN> key to station user in DM 4.9.2.

Select MJOIN key.

→ Assign <MJOIN> feature code value in DM 2.8.0.

Dial MJOIN feature code.

- External user

→ Set DID routing table in DM 3.2.3 to allow external user to join Meet-Me conference.

(1) Assign <MJOIN> feature code value in DM 2.8.0. (ex. 88)

(2) Input specific digits as Incoming digits in DM 3.2.3. (ex. 200)

(3) Input MJOIN feature code as its Ring Plan in DM 3.2.3.

2.8.0.Numbering Plan				
Cabinet FEATURES ▼				
Slot	Channel	Port No	Device Type	Tel Number
LOGOUT	171	633	Features	
MACR	170	632	Features	
MCONF	163	625	Features	7775
MGC	162	624	Features	88
MJOIN	161	623	Features	7777

Figure 4.6 MJOIN Feature Code

2. Dial Conference ID

Participant hears announcement which requests to dial conference ID.

Participant should dial conference ID following below examples.

- Conference ID (xxx) + End of Digit ('#')
 - 4 digits (Simple way)
 - User will join the conference as an Anonymous.
- Conference ID (xxx) + Member Login Index (yy) + End of Digit ('#')
 - 6 digits.
 - Member Login Index can be 00 to 99. If user dials 99 as member

login index, then that user will join the conference as a Master.

3. Dial Password

After confirming Conference ID, participant hears announcement which requests to dial password.

Participant should dial conference ID following below examples.

- Password (zzzz) + End of Digit ('#')
→ 5 digits

4. Greeting

After confirming password, participant hears greeting announcement

5. Record Whoami

Participant hears announcement which requests to record his/her whoami. After playing announcement, you can hear beep tone which alarms the start of recording.

Recording will be stopped when participant dials '#' key or max record timer (Max Rec Time) in DM 9.1.1 is expired.

6. Play SPA

Only 1st member can hear SPA until the other participants join the conference.

In this case 1st member doesn't join the conference yet but can join the conference after confirming password of 2nd member.

7. Join Alarm

Current members who already join the conference can hear join-alarm tone of a new participant.

8. Play recorded whoami

Current members who already join the conference can hear recorded whoami of a new participant. In this case, if new participant is a station user, "Meet-Me Conf / Wait for Joining" message will be displayed on its LCD until he/she joins the conference.

9. Join Meet-Me conference

Participant finally joins the conference after completing above procedures.

Record Meet-Me Conference

Master can record current conference which sets Recording option to enable.

1. Connect Conference Manager and click **[My Meet Me]** menu.
2. Information of all conference groups is displayed.
Select one conference group that master wants to record and click **[Watch]** button.
3. Conference Status menu is displayed.
Click **[Recording Start]** button to start recording conference call.
Be sure that one recording occupies one conference channel.

The screenshot shows the 'Conference Status' window. At the top, it displays 'Conference ID : 080', 'Start Time : 2010. 11. 4 08:00', and 'End Time : 2010. 11. 4 21:30'. Below this is a 'Subject' field with the value 'test080' and a 'Lock' checkbox. The main area contains a table with columns: Phone, Name, Email, Attendance Time, Mute, and Operation. The 'Operation' column is further divided into 'Status' and 'Action'. Two participants are listed: one with phone number 202 and another with 204, both with names '[Anonymous]' and attendance times of 2010. 11. 4 09:32. The 'Recording' checkbox in the 'Status' column for the second participant is highlighted with a red box. At the bottom of the window, there are three buttons: 'Recording Stop' (highlighted with a red box), 'Paging Start', and 'Terminate'.

Phone	Name	Email	Attendance Time	Mute	Operation	
					Status	Action
202	[Anonymous]		2010. 11. 4 09:32	<input type="checkbox"/>	In	Remove
204	[Anonymous]		2010. 11. 4 09:32	<input type="checkbox"/>	In	Remove
				<input type="checkbox"/>	Active	
				<input type="checkbox"/>	Not In	
				<input type="checkbox"/>	Not In	

Figure 4.7 Record Meet-Me Conference

Download Recorded Conference File

Master can download recorded conference file after completing or terminating conference.

1. Connect Conference Manager and click **[Meet Me History]** menu.

2. Information of all completed or terminated conference groups is displayed.

Select one conference group that master wants to download recorded conference file and click **[Download Record]** button.

Be sure that **[Download Record]** button is activated only when selected conference is completed or terminated.

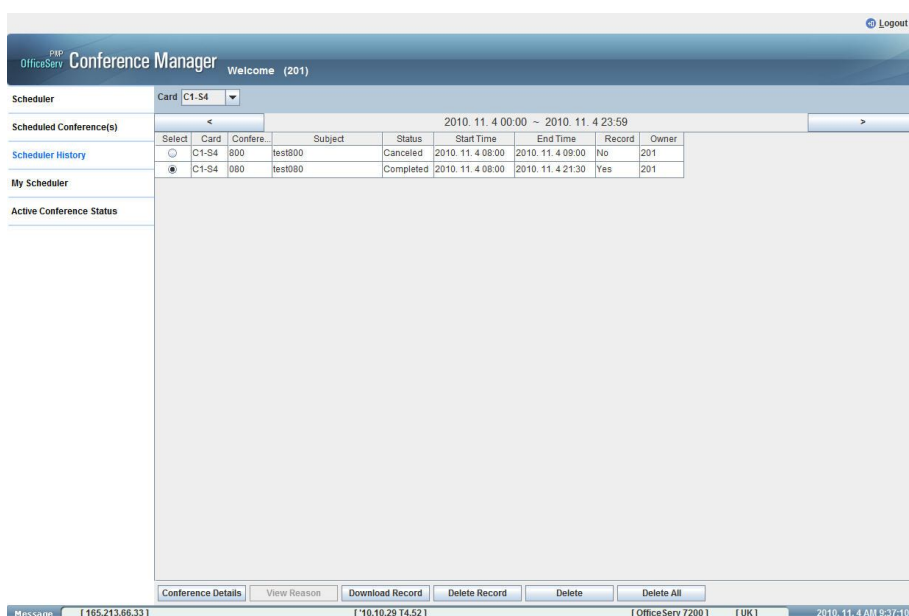


Figure 4.8 Download Recorded Conference

3. Save menu is displayed.
Select directory and save current recorded file.
Recorded file is saved as snd type and named as
<rec_date_conference id>.wav.

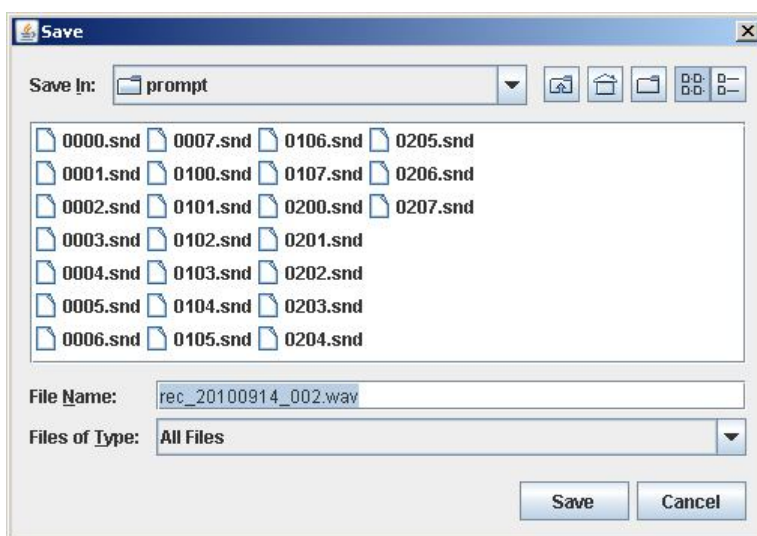


Figure 4.9 Save recorded conference

Play Downloaded Conference File

Downloaded conference file can be played as following.

Run a multimedia program and open a downloaded conference file.
The downloaded conference file is provided by wave type, so you don't have to change its file type.

Page Meet-Me Conference

Master can page current conference which sets Paging option to enable. Before connecting Conference Manager, page group (0~4) and its members should be set in DM 4.1.3.

1. Connect Conference Webpage and click **[My Meet Me]** menu.
2. Information of all conference groups is displayed.
Select one conference group that master wants to page and click **[Watch]** button.
3. Conference Status menu is displayed.
Click **[Paging Start]** button to start paging conference call.
Page members can hear current conference until page is stopped.
Be sure that one paging occupies one conference channel.

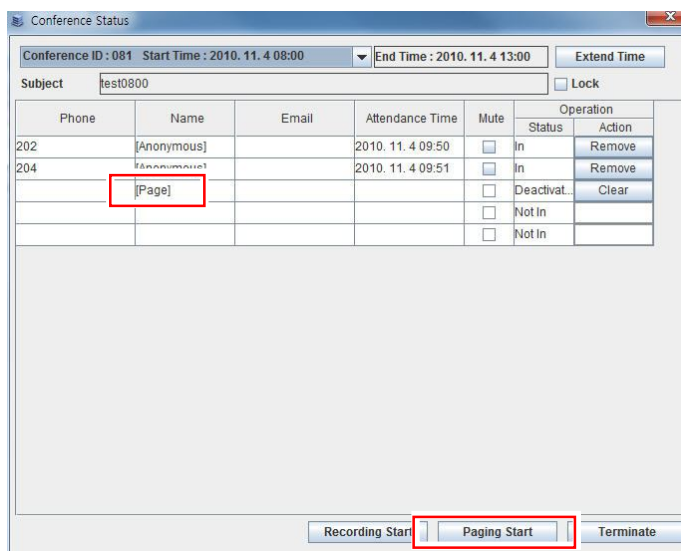


Figure 4.10 Page Meet-Me Conference

Additional Features

Additional features of Meet-me conference can be checked on [My Page] → [Watch]. And watching conference is allowed when conference status is In Progress.

1. Connect Conference Manager and click **[My Meet Me]** menu.
2. Information of all conference groups is displayed.
Select one conference group that master wants to check and click **[Watch]** button.

Lock/Unlock the conference

If **[Lock]** is checked, no more members can join the conference. Remove the mark on **[Lock]** to allow other members to join.

Mute/UnMute the conference member

If **[Mute]** is checked, that member can't send his/her voice to other members.

Kick out the conference member

If master selects **[Kick Out]** button, that member is kicked out automatically and can't join current conference until master selects <Clear>. If external user is kicked out and has a specific CLI number, a member who has a same CLI number can't join current conference.

Conference time extension

There are two ways to extend conference end time.

- 1) PWP: Select <Meet Me MyPage> and select conference which you want to extend end time. When <Conference Status> is popped-up, select <Extend Time>. One click prolongs 15 minutes and master can extend end time up to 1 hour.
- 2) Phone: In DM 2.8.0, select FEATURES and set tel. number of <EXTEND>. (ex. EXTEND : 99)
Join meet-me conference by Master.
 - (a) Select MJOIN key and input <Conference ID + Master login index>. ==> If conf ID is 104, you should input 10499 to join conference by master. (99 is master login index.)
 - (b) During conference, select EXTEND key or input its tel. number. (ex. EXTEND : 99)

You can see end time is extended in <Conference Status> menu.

Meet-Me Adhoc

It is possible that the user who doesn't know join information (Conference ID, password etc.) can join Meet-me conference. This feature is called Meet-Me Adhoc and there are two ways to transfer current call onto Meet-me conference.

1) In case of Conversation

When user A and B are on the conversation, <A> can make join Meet-me conference.

(a) During conversation, <A> selects [TRSF]+[MJOIN].

(b) Meet-me conference join flow is started.

In this case opposite party is on hold.

(c) After completing join flow, joins the conference and <A> is disconnected.

2) In case of Meet-me Conference

When user A joins Meet-me conference, <A> can make join current conference without disconnecting <A> itself.

(a) During Meet-me conference, <A> selects [MJOIN].

(b) When hearing dial tone, <A> dials the number of .

(c) After connecting with , <A> selects [MJOIN] again.

Then both <A> and join the conference at the same time.

※ In this case join flow is not needed because <A> is already a certified member.

Ad-hoc Conference

Ad-hoc conference is established when the master invites a conference member one by one. OfficeServ system also supports such a conference types without CNF24 but be sure that this conference is made by using system resource.

Features

- Ad-hoc conference can be established when there are at least 3 members. If one of members disconnects the call, Ad-hoc conference is also disconnected.
- If there are more than 4 members in conference and master disconnects the call, one of remaining members becomes a new master.

Conference Progress

1. Assign <MCONF> key to station user in DM 4.9.2 or set feature code value in DM 2.8.0.
2. Station A selects MCONF key or dial its feature code during conversation with station B.
And dial another station C to invite Ad-hoc conference.
→ Be sure that Ad-hoc conference with MCONF key uses CNF24 conference channels not system resource and station A become a master in this case.
3. Dial MCONF key.
If master wants to invite another member, dial that member's number.
If not, dial MCONF key again.
→ Ad-hoc conference with station A, B and C is established.

2.8.0.Numbering Plan				
Cabinet FEATURES				
Slot	Channel	Port No	Device Type	Tel Number
LOGOUT	171	633	Features	
MACR	170	632	Features	
MCONF	163	625	Features	7775
MGC	162	624	Features	88
MJOIN	161	623	Features	7777

Figure 4.11 MCONF Feature Code

Pre-defined Conference

Pre-defined conference is established when the master makes a call to pre-defined conference group.

Features

- If master disconnects the call, current pre-defined conference is also disconnected.
- If all members disconnect the call in the middle of a conversation, master and current pre-defined conference is also disconnected.

Conference Progress

1. Set pre-defined conference group in DM 9.1.4.
2. Select conference group. (00~99)
3. Insert conference members who will be called by master.
 - One conference group has up to 23 members.
 - One CNF24 provides max 24 conference channels and one of them is assigned to master and the rest of channels can be assigned to members.
 - Internal and external users can be registered as a pre-defined conference member.
4. Assign MGC key to station user in DM 4.9.2 or set feature code value in DM 2.8.0.
5. Select MGC key and dial conference group number (00~99).
 - In this case, station user becomes a master of pre-defined conference.

2.8.0.Numbering Plan				
Cabinet FEATURES ▼				
Slot	Channel	Port No	Device Type	Tel Number
LOGOUT	171	633	Features	
MACR	170	632	Features	
MCONF	163	625	Features	7775
MGC	162	624	Features	88
MJOIN	161	623	Features	7777

Figure 4.12 MGC Feature Code



ABBREVIATION

B

BRI Basic Rate Interface

C

CPLD Complex Programmable Logic Device
CPU Central Processing Unit

D

DM Device Manager

F

FXO Foreign eXchange Office
FXS Foreign eXchange Station

H

HDD Hard Disk Drive

I

IP Basic Rate Interface
ISDN Integrated Services Digital Network

J

JRE Java Runtime Environment

L

LAN	Local Area Network
LED	Light Emitting Diode

M

MAC	Media Access Control
MCONF	Multi Conference
MCP	Main Control Processor
MGC	Multi Group Conference
MJOIN	Multi Join conference

O

OS	Operating System
----	------------------

P

PCB	Printed Circuit Board
PRI	Private Rate Interface
PSTN	Public Switched Telephone Network
PWP	Personal Web Page (OfficeServ Conference Manager)

R

RAM	Random Access Memory
-----	----------------------

S

SIP	Session Initiation Protocol
SPA	Sole Participant Audio

U

UART	Universal Asynchronous Receiver and Transmitter
UTP	Unshielded Twisted Pair wire

W

WIP	Wireless Intelligent Peripheral
-----	---------------------------------

WEEE SYMBOL INFORMATION



Correct Disposal of This Product (Waste Electrical & Electronic Equipment)

(Applicable in the European Union and other European countries with separate collection systems)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

BATTERY SYMBOL INFORMATION



Correct disposal of batteries in this product

(Applicable in the European Union and other European countries with separate battery return systems.)

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

CNF24

User Guide

© 2010 Samsung Electronics Co., Ltd.

All rights reserved.

Information in this manual is proprietary to SAMSUNG Electronics Co., Ltd.

No information contained here may be copied, translated, transcribed or duplicated by any form without the prior written consent of SAMSUNG.

Information in this manual is subject to change without notice.

