HDV Firmware Upgrade Flow

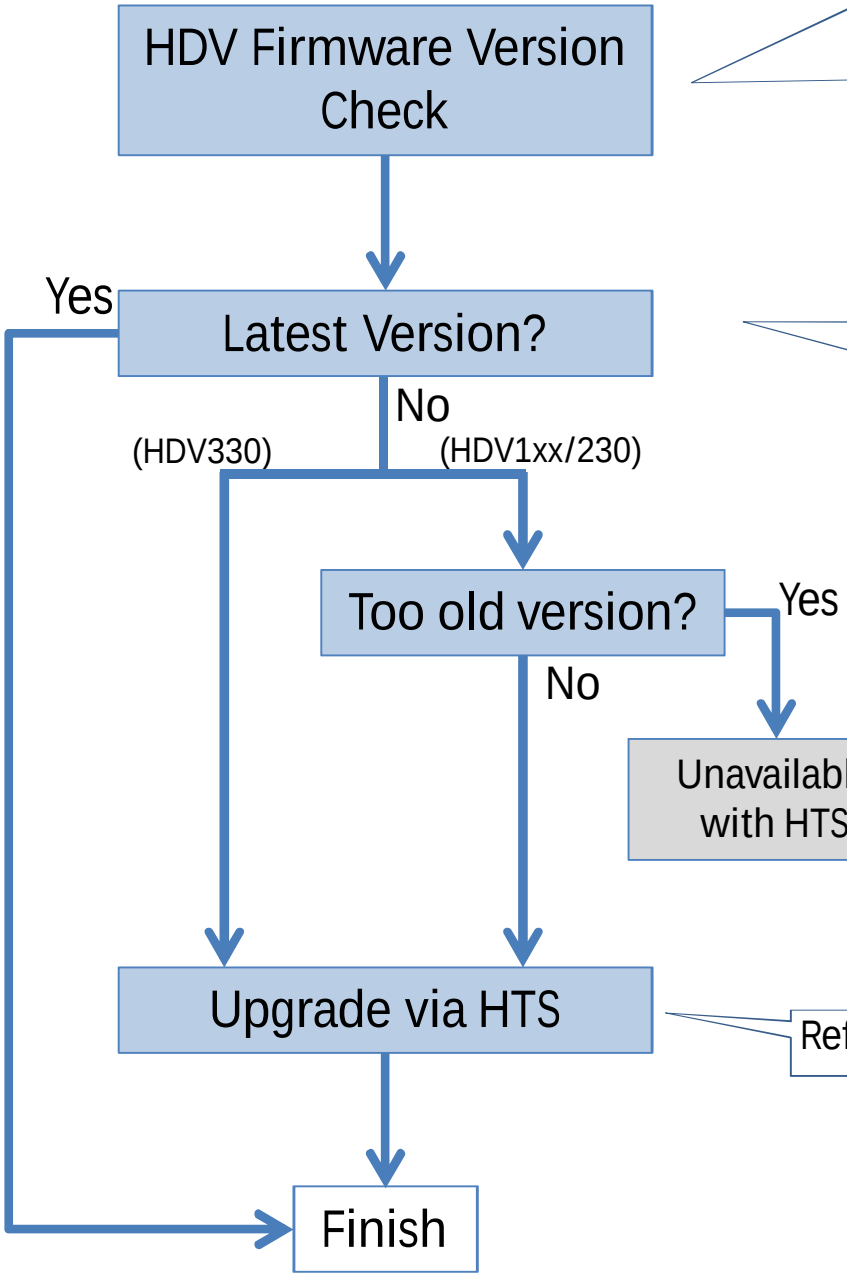

How to check HDV version
(Menu -> System Settings -> Status -> Firmware Version)

Model	Latest Version
HDV100/130	V05.000
HDV230	V05.000
HDV330/430	V03.105

Model	Too old version (Unavailable with HTS)
HDV100/130	Below than V01.064 (V01.064 is OK)
HDV230	Below than V01.013 (V01.013 is OK)

Refer to HTS Manual for details.